


Instruction for installation

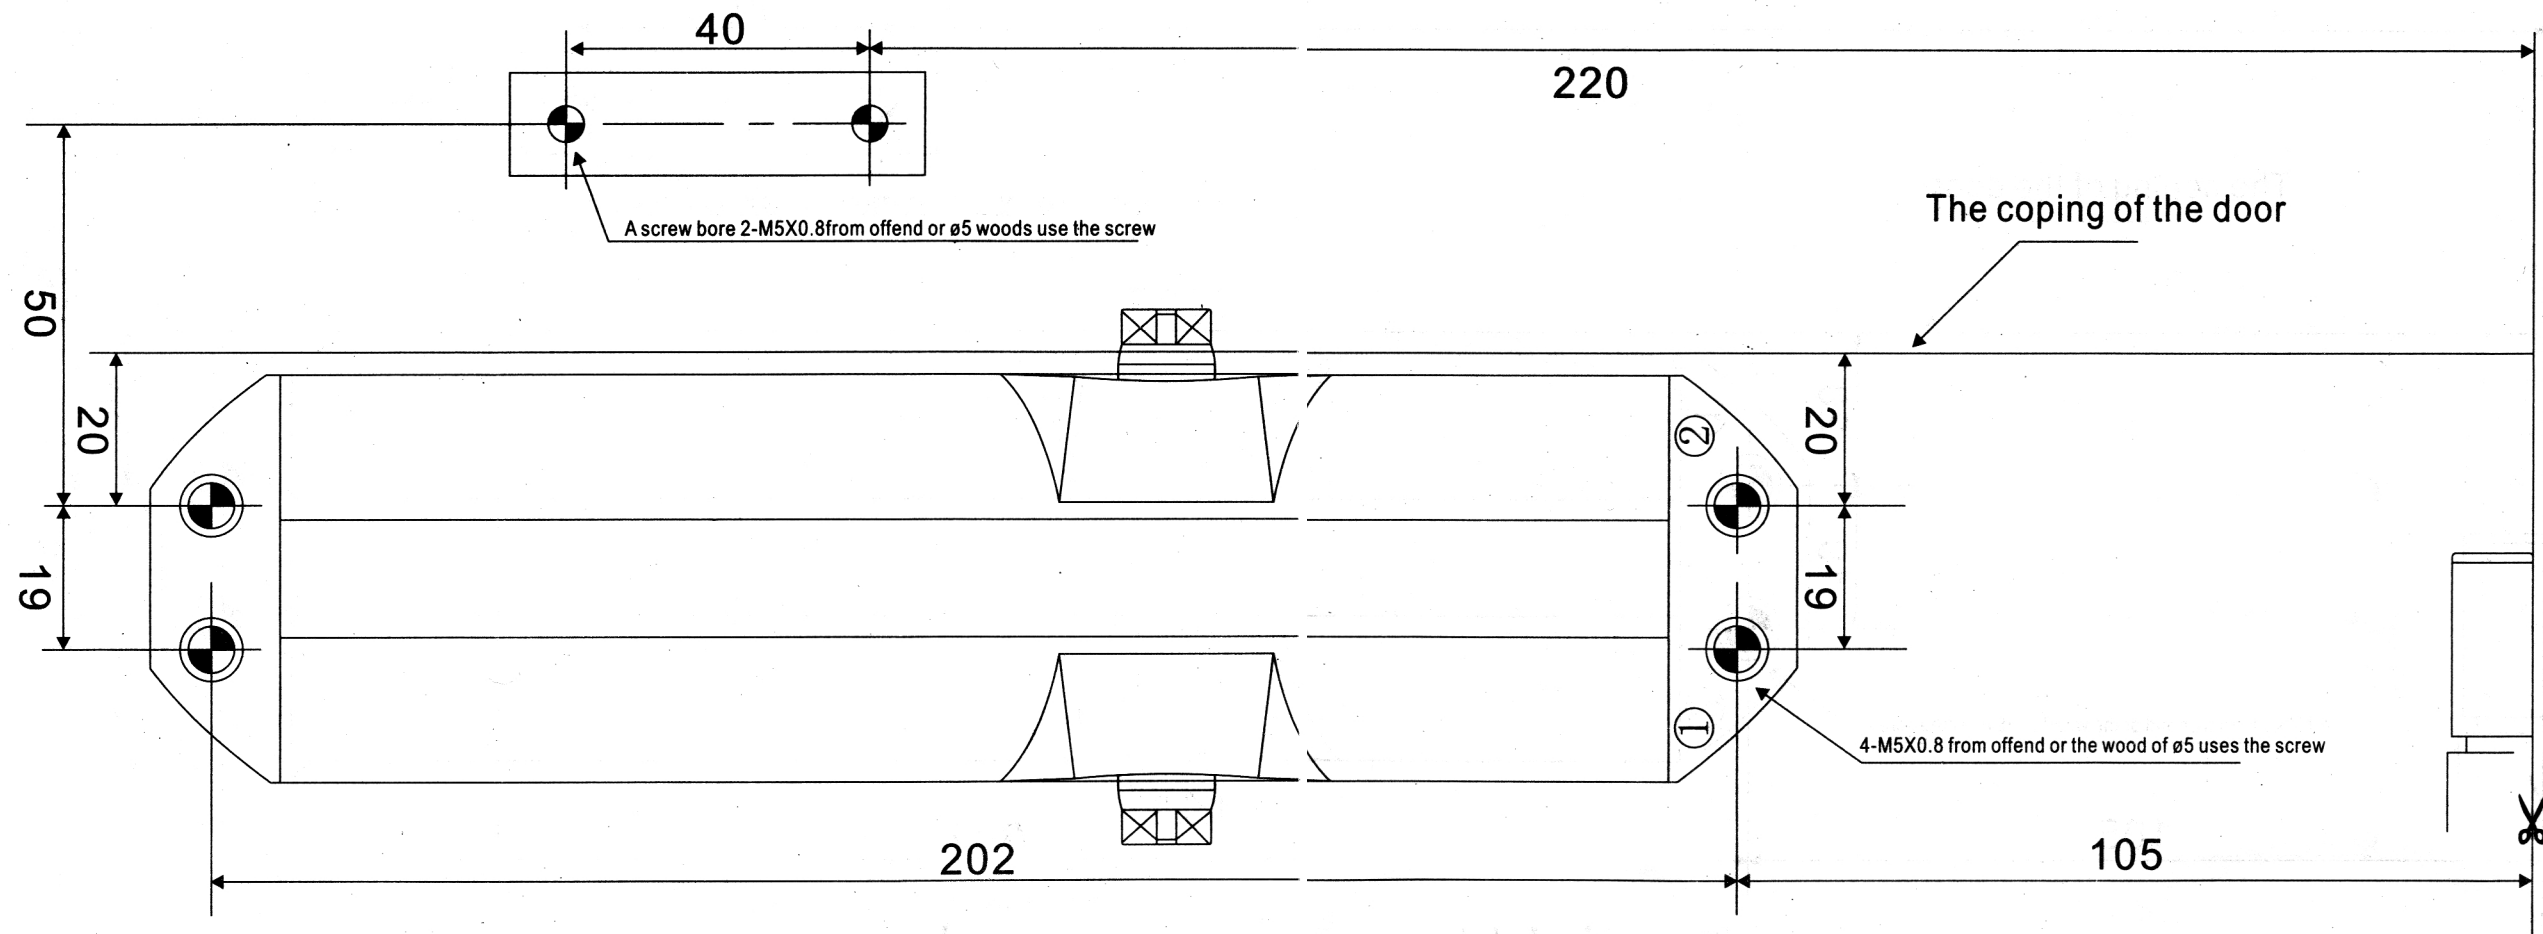

It is left to open a paper rules

Technology Data & Function


- Suit for door width: ≤ 1000 mm
- Loading door weight range: 40 – 60kg
- Door closing angle degree: $180^\circ - 20^\circ$
- Door closing lock angle degree: $20^\circ - 0^\circ$
- Spray plastic cement & rocker arm, guard against corrosion.
- Precise seal of fuel tank, forestall oil leak out.
- High quality cast of aluminum alloy fuselage, three folds shining paint, guard against oxidize.
- Two hydraulic pressure mech, they control two stop gate and control the rate of deadlock also control hydraulic pressure
- High carbon steel gear wheels, high carbon steel racks, treat by high frequency become deformed smaller nimble function.

The fixed position type closes door the machine installs the announcements



- 1, before installing, cannot close door the stalk of The stalk of the wheel gear over 180 degree, otherwise, will damage the machine.
- 2, use to shake the arm adjust to try the wheel gear, be to turn 180 degree, the wheel gear will be places in the ceasing appearance, should on time reply originally position, the in order to prevent adjust again while trying, but the wreath of Break closes door the machine.
- 3, close door the tool have the auto close function, strictly forbid by hand the habit pulls door.

The decision opens the direction of the door . Pass a speed adjust valve

This box machine applies any right open door or left open door, please be instructed to decide according to the next diagram before gearing its open a direction.

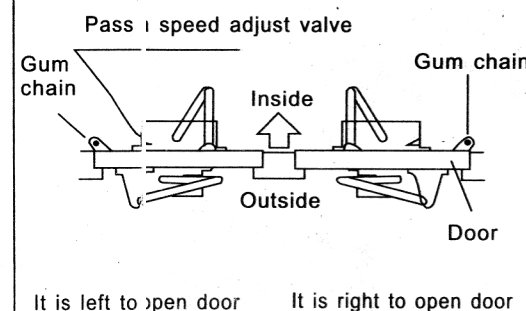


The 1 adjusts soon screw control a pass a speed. The 2 adjusts soon screw control a pass a speed. Its adjustment method is slow for clockwise, hour of The needle direction is then quick.

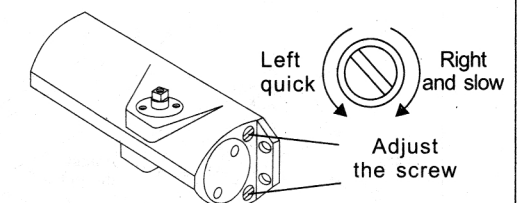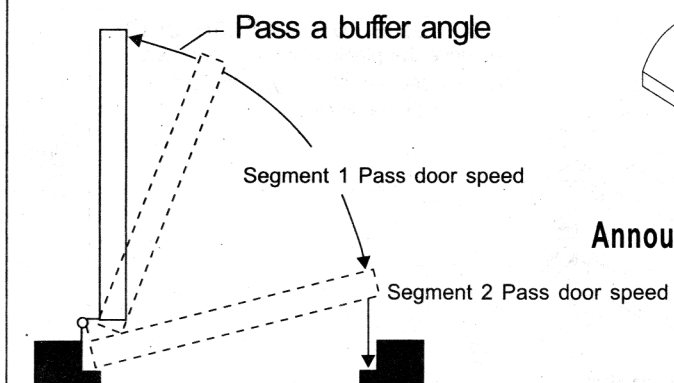

Announcements:

Adjust soon the cannot Turn in screw outs the machine flat surface, close door the machine otherwise will leak the oil namely, again can't positive often work.

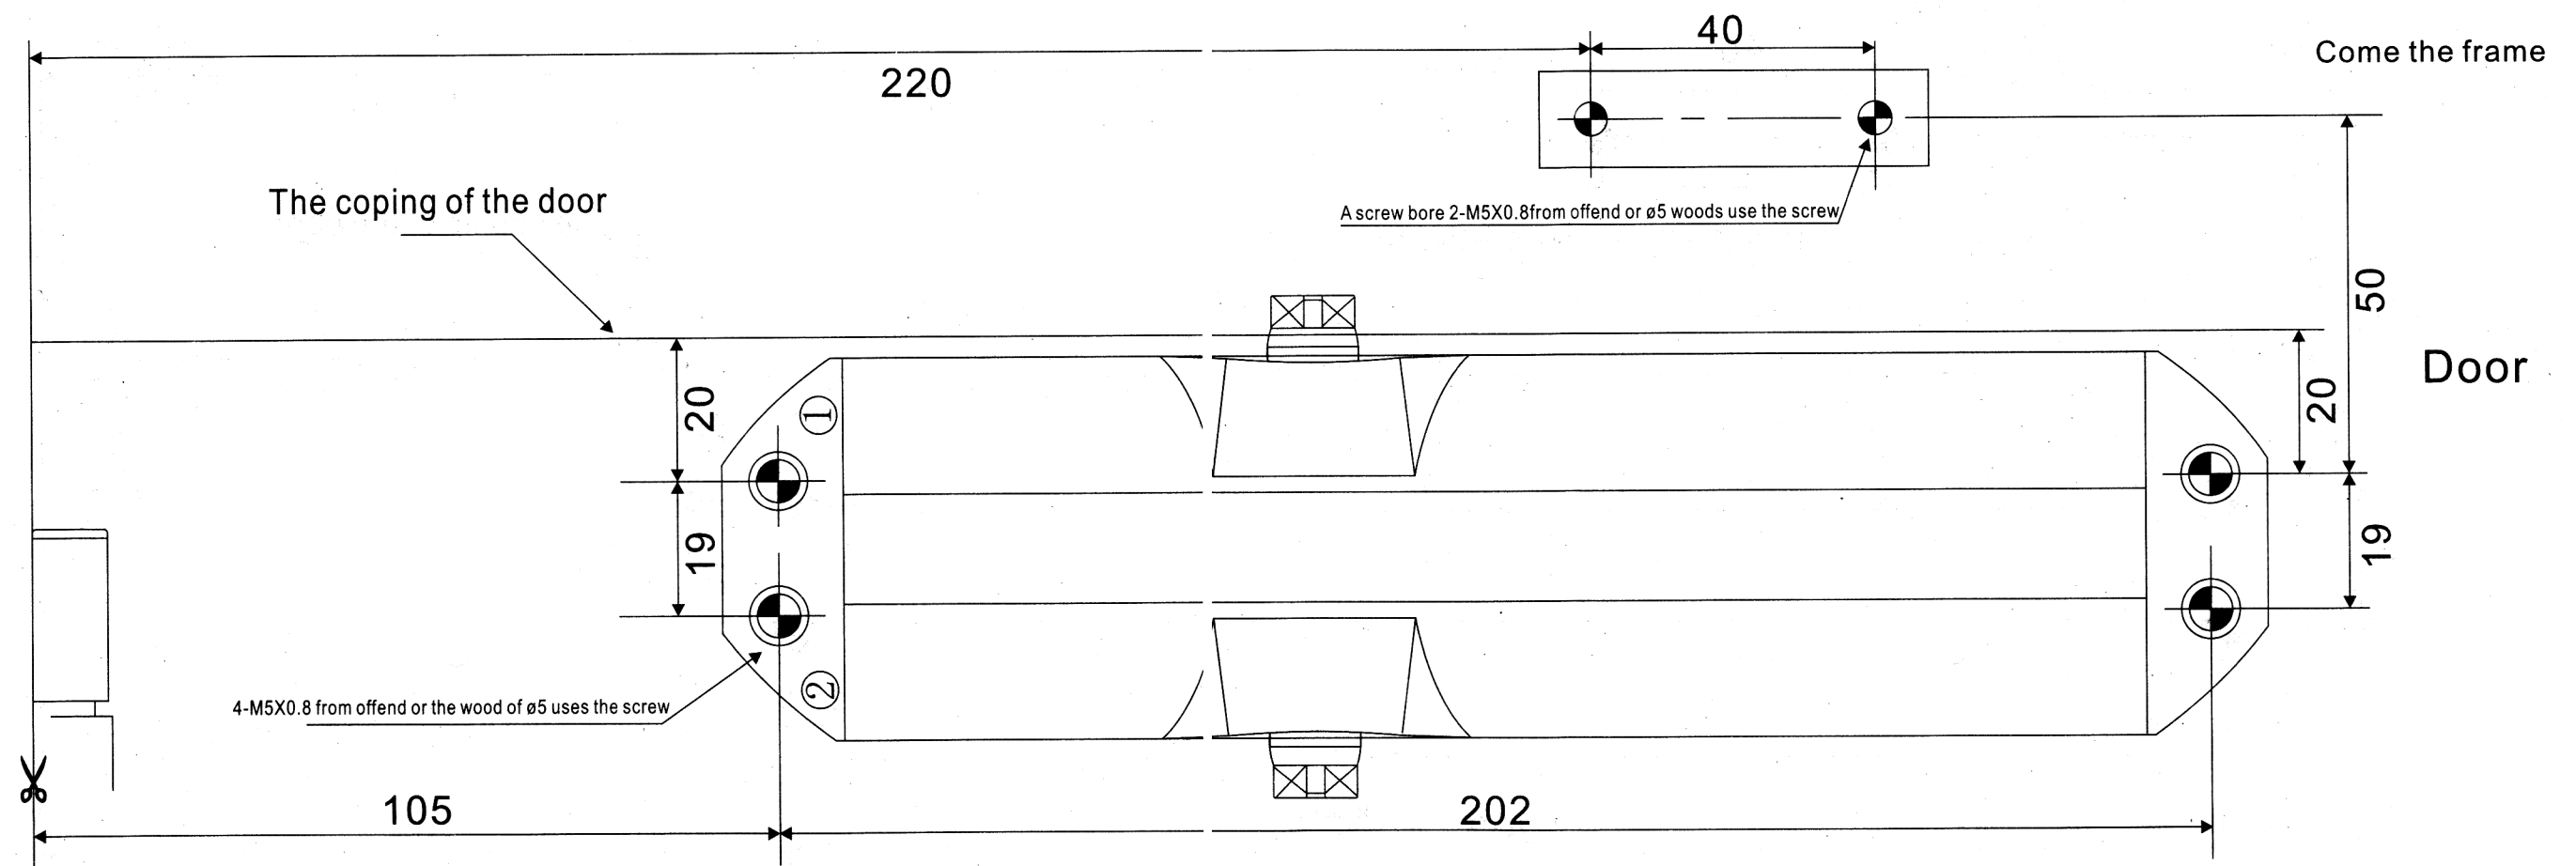

It is right to open a paper rules

Installation steps diagram

(The top diagram a row arithmetic figur in talls the size for the standard, shearing along the line the bottom can immediately make the gearing paper rules)

